



TYPES OF ALTERNATOR PLUGS

PL_4310 	PL_4509 	PL_5006 	PL_9100 	PL_9114 					
PL_4311 	PL_4510 	PL_5008 	PL_9101 	PL_9115 					
PL_4400 	PL_4511 	PL_5100 	PL_9102 						
PL_4401 	PL_4700 	PL_5101 	PL_9103 						
PL_4402 	PL_4701 	PL_5102 	PL_9104 						
PL_4500 	PL_4800 	PL_9000 	PL_9105 						
PL_4501 	PL_4801 	PL_9001 	PL_9106 						
PL_4502 	PL_5000 	PL_9002 	PL_9107 						
PL_4503 	PL_5001 	PL_9004 	PL_9108 						
PL_4504 	PL_5002 	PL_9005 	PL_9109 						
PL_4505 	PL_5003 	PL_9006 	PL_9110 						
PL_4506 	PL_5004 	PL_9007 	PL_9111 						
PL_4507 	PL_5005 	PL_9008 	PL_9112 						
			PL_9113 						



KEY

D+/L/I/61E - Lamp
 FR/DFM/DF/F/LI/M - Feedback
 W/P - Stator
 IG/R/I/15 - Ignition
 AS/A/S - Battery Sensor

LIN/BSS - COM Communication
 RVC/SIG/D(Mazda)/G/C/RC/RLO/PHIN - CPU Control PWM
 F1/F2 - External regulator
 K - i-ELOOP
 D/D(S)/S - Stator

EXC - Excitation
 E - Earth
 Empty - No connection